

UTM-TSH

Touch Screen Single Column Electronic Universal Testing Machine



Contact us

Mikrosize Precision Instrument Co.,Ltd

A-4035 RuiFeng Business Expo, Wuhu City, China , 241000.

Web: www.mikrosize.com

Email: mikrosize@mikrosize.com



Feature and Application

Product Feature

- Wide range of applications, powerful functions, compact structure, and easy operation.
- High measurement accuracy.
- Equipped with a high speed, low vibration, and low noise motor drive device
- Multilingual switching
- Flexible report viewing and printing functions
- Automatic return
- Multiple curve modes (optional): such as stress - strain, force - displacement, force - time, strength - time, etc.

Multiple test mode functions: tensile, bending, compressive, flexural, tear, peel, elongation rate, and other

- test modes are available.
- Multiple protection devices.
- Optional large - deformation displacement tracker (for high -lift models): can meet specific test requirements.
- Optional upgrade to connect to a computer and use the advanced version of the testing software with more functions.

Standards complied with:

GB/T 2611、GB/T 16491、GB/T 1040、ISO 527、GB/T 8804、GB/T 9341、GB/T 12160、GB/T 16825



Product Application

- Manufacturing industry: Detect the mechanical properties of various parts and raw materials in production to ensure that product quality meets design requirements.
- Material research and development: Assist researchers in understanding the mechanical properties of new materials and providing data support for material improvement and innovation.
- Research institutions: In scientific research experiments, it is used to study the mechanical behavior laws of substances and promote the development of related disciplines.

Product Details



1.Load Cell

2.Fixture

3.Touch Display Screen

4.Emergency Stop Button


5.Switch

6.Printer

7.Limit Device

8.Leveling Feet

9.Extensometer (Optional)

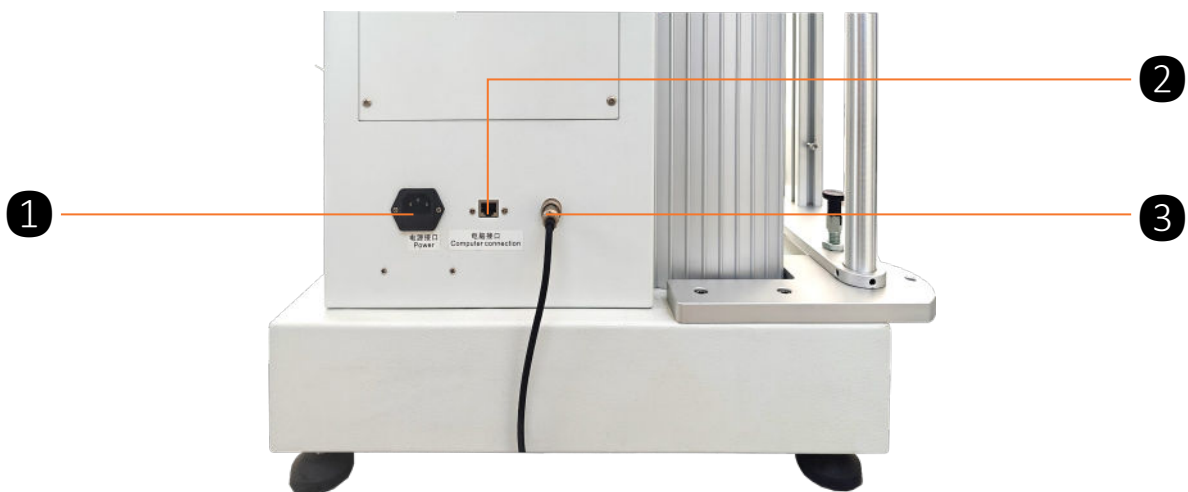

1.Power cord interface

2.Computer Wlan interface (optional)

3.Extensometer socket (optional)


Product Details



- This device is equipped with a high - precision force value sensor to ensure the accuracy of experimental data.
- The fixture can be quickly installed and removed. Loosen the fixture locking nut and pull out the fixture pin to remove the fixture. Installation is carried out in the reverse order.
- This device can be adapted to a variety of fixtures to meet the requirements of different experiments.


Operation Interface

Display Screen Interface/Host Control

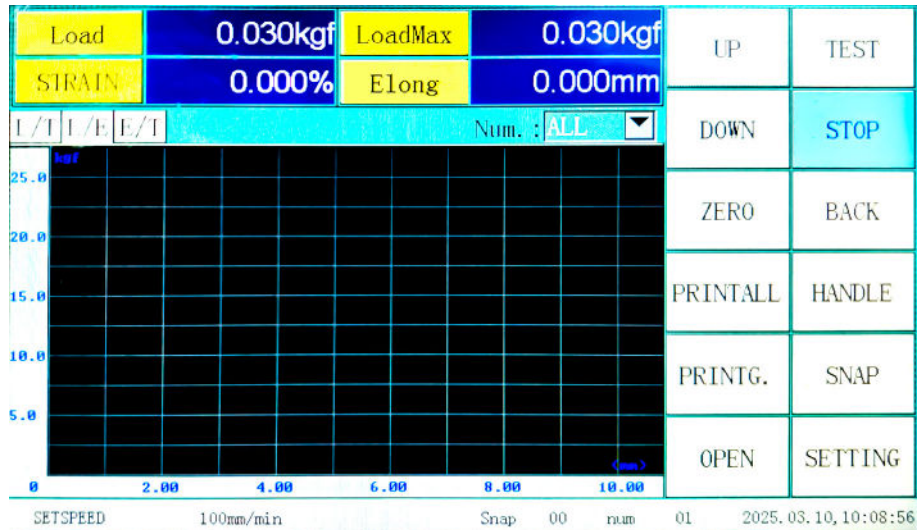

- The display screen of this machine uses a touch - control method, which is simple and convenient to operate. On this interface, you can:
- Control the lifting of the machine and the start and stop of the experiment.
- Zero the test data and return the machine to its original position.
- View and print the test results.


Select Display Parameters

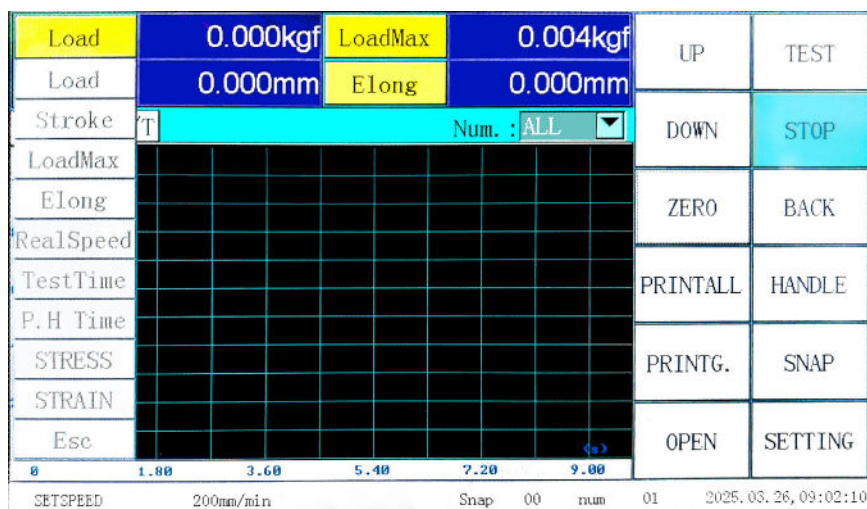

- Click the parameter section to select the parameters you want to display. The selectable parameters include: Load; Stroke; Load Max; Elong; Real Speed; Test Time; P.H Time; STRESS; SIRAIN


Operation Interface

Group and Curve Coordinate Selection

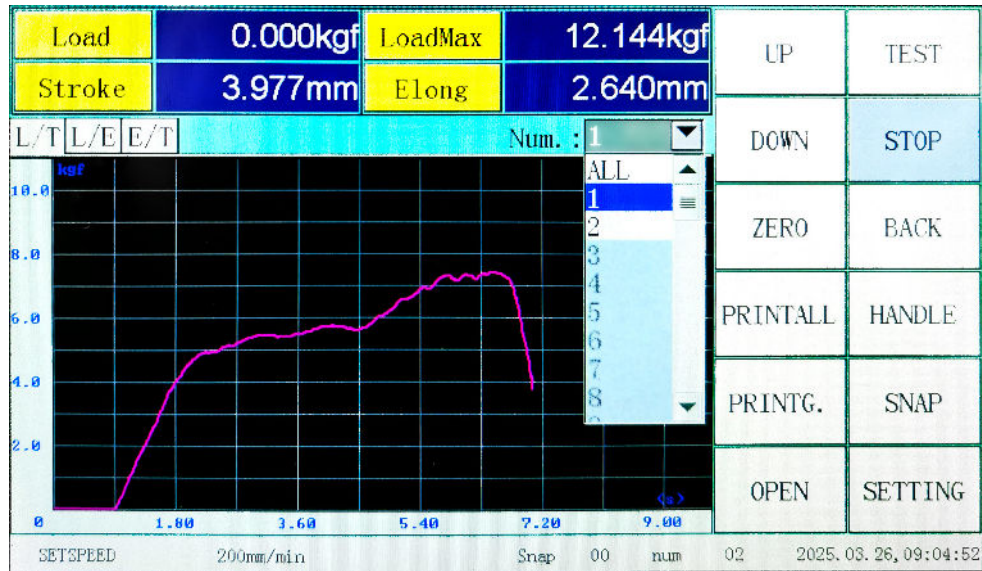

- After multiple groups of tests , click "Num" to select and view the curve chart corresponding to the according test group.
- 3 types of curve charts with coordinates, Force - Time (L/T); Force - Displacement (L/E); Displacement - Time (E/T). Click the corresponding button to switch.

Manual Control Parameter Setting

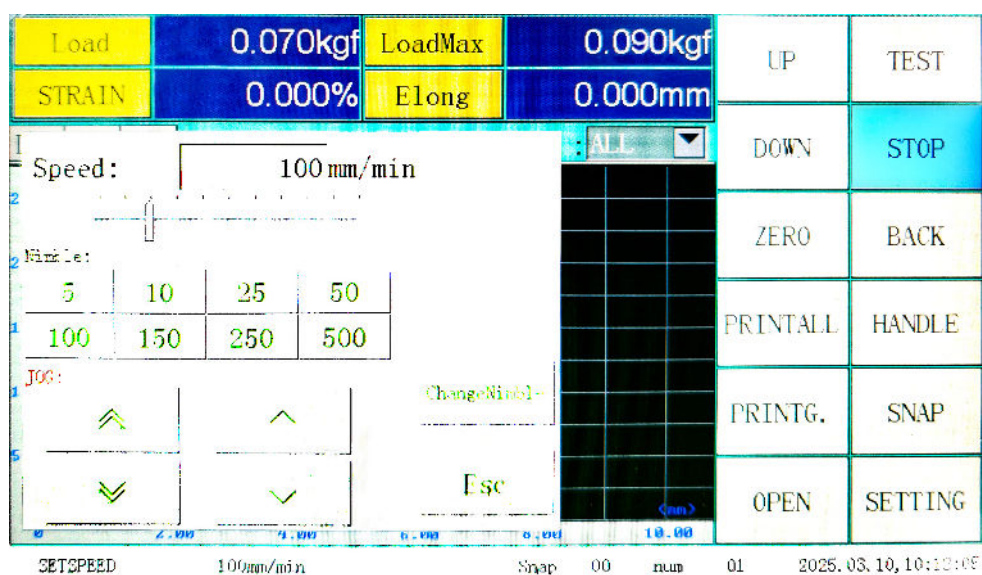

- On this interface, you can adjust the lifting speed of manual control. Users can directly select the required speed in "Nimble" or adjust the speed by sliding the slider.

Operation Interface

Parameter Control 1

1. FilterCo:	<input type="text" value="1"/>	Sample
2. BreakClearN. :	<input type="text" value="0"/>	Scheme
3. Zero:	<input type="text" value="ZeroAll"/> ▼	Result
4. LoadDir:	<input type="text" value="Abs."/> ▼	CurveSet
5. ElongDir. :	<input type="text" value="Abs."/> ▼	Unit
6. StrokeDir:	<input type="text" value="Abs."/> ▼	Method
7. ElongSensor:	<input type="text" value="Stroke"/> ▼	Supply1
8. LoadSensor:	<input type="text" value="500.00kgf"/> ▼	Supply2
		TEST_INF
		About
		CALI.

- Select the mode of the "Zero" button on the test main interface, with options of "Full Zero" and "Force Zero".
- Select the directions of deformation, force value, and displacement, with options of "Reverse", "Not Reverse", and "Absolute Value".
- Select the deformation sensor, with options of "Displacement", "Rubber Extensometer (optional)", and "Metal Extensometer (optional)".
- Select the force sensor.

Operation Interface

Parameter Control 2

1. LoadProtect:	100	%Range	<input checked="" type="checkbox"/> BeepOn	Sample
2. ElongProtect:	99999	mm	<input checked="" type="checkbox"/> BeepON_Limited	Scheme
3. HighSpeed:	60	%MaxSpeed	<input type="checkbox"/> AutoReturn	Result
4. LowSpeed:	10	%MaxSpeed	<input type="checkbox"/> AutoZeroForce	CurveSet
5. ReturnSpeed:	200	mm/min	<input type="checkbox"/> AutoZeroElong	Unit
6. ReturnDecCoe.:	10		<input type="checkbox"/> AutoZeroStroke	Method
7. ReturnDelay:	1.2	s	<input type="checkbox"/> ClosedloopS.	About
8. ScreenSaver:	0	min	<input type="checkbox"/> ShowMaxload onPCmode	Supply1
9. Language:	English			CAL I.
10. Return Mode:	Zero			Supply2
				TEST_INF

- Protection settings, including force value protection and deformation protection. You can set the protection parameters as needed.
- Set the return speed, waiting time, and deceleration coefficient. The deceleration coefficient is used to prevent displacement over - shoot.
- Set the number of decimal places displayed for the force value.
- Switch the language display, with options of "English", "Chinese", and other languages available upon customization.
- Select the return method, with options of "Displacement Zero Point" and "Limit Position".
- Beep when touching the screen or triggering the limit.
- Automatically zero the displacement, force value, and deformation before the test, and automatically return to the original position after the test.

Operation Interface

Test Result Selection

<input type="checkbox"/> LoadMax	<input type="checkbox"/> Max Strip	<input type="checkbox"/> Print Curve	Sample
<input checked="" type="checkbox"/> Elong of MaxL	<input type="checkbox"/> Min Strip		Scheme
<input type="checkbox"/> MaxElong	<input type="checkbox"/> Avg Strip		Result
<input type="checkbox"/> ElongRate_Max	<input type="checkbox"/> Str.Strip		CurveSet
<input type="checkbox"/> MaxElongRate			Unit
<input type="checkbox"/> Fracture. L			About
<input type="checkbox"/> Str.			ResultC.
<input type="checkbox"/> Glue St.			CALI.
<input type="checkbox"/> Tear St.			AutoSnap
<input type="checkbox"/> Elastic Coe.			TEST_INF

- Select the desired test results. The checked items will be displayed in the report.

Test Result Selection

1. LoadStart:	<input type="text" value="5"/>	% (25.00kgf)	Sample
2. ElongStart	<input type="text" value="10"/>	mm	Scheme
3. TimeStart:	<input type="text" value="9"/>	s	Result
4. StressStart:	<input type="text" value="10"/>	MPa	CurveSet
5. StressStart:	<input type="text" value="10"/>	%	Unit
<input type="checkbox"/> Show Stress/Strain			About
			CALI.
			TEST_INF

- Set the starting parameters of the curve.

Operation Interface

Units and Precision


	Unit	Accuracy	
1. Load:	kgf	3	Sample
2. Elong:	mm	3	Scheme
3. Time:	s	0	Result
4. Speed:	mm/min	1	CurveSet
5. Str. :	MPa	2	Unit
6. Tear&StripStr:	N/mm	2	About
			CAL I.
			TEST_INF

- There are multiple different units available for each parameter.
- Precision represents the number of decimal places.

Load	kgf, N, lbf, gf, KN, t
Elong	mm, cm, inch
Time	s, min, h
Speed	mm/min, mm/s, cm/min, cm/s, in/min, in/s
Str	MPa; kPa; kgf/mm ² ; kgf/cm ² ; N/mm ² ; N/cm ² ; N/m ² ; gf/mm ² ; gf/cm ² ; psi; lbf/in ²
Tear/StripStr	N/mm; N/cm; N/m; kN/m; kgf/mm; kgf/cm; kgf/m; gf/mm; gf/cm; lbf/in; klb/in


Mikrosize Software Interface

Main Interface

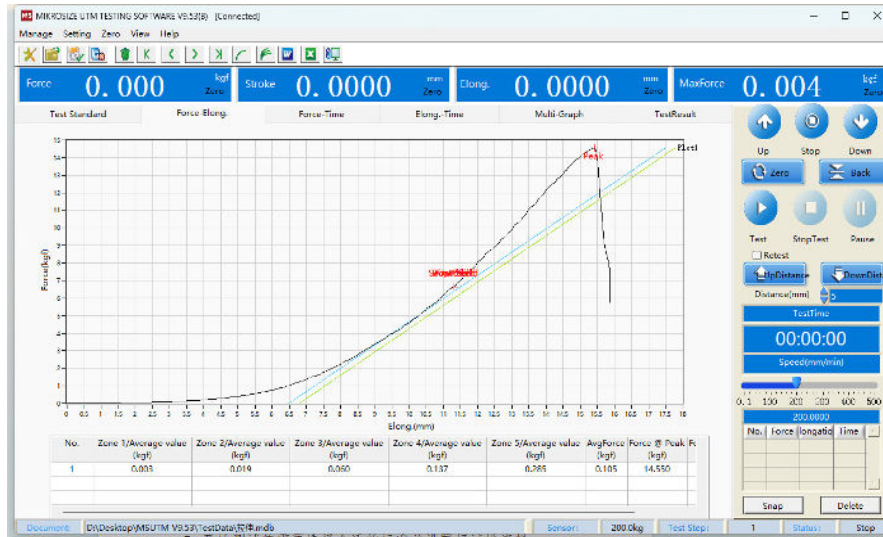

- The buttons on the right side can control the lifting, running, stopping, and jogging speed of the host.
- The upper part displays four parameters: force value, displacement, deformation, and maximum force. You can click the item name to select the item to be displayed, such as stress, strain, elongation rate, speed, etc.

Test Standard

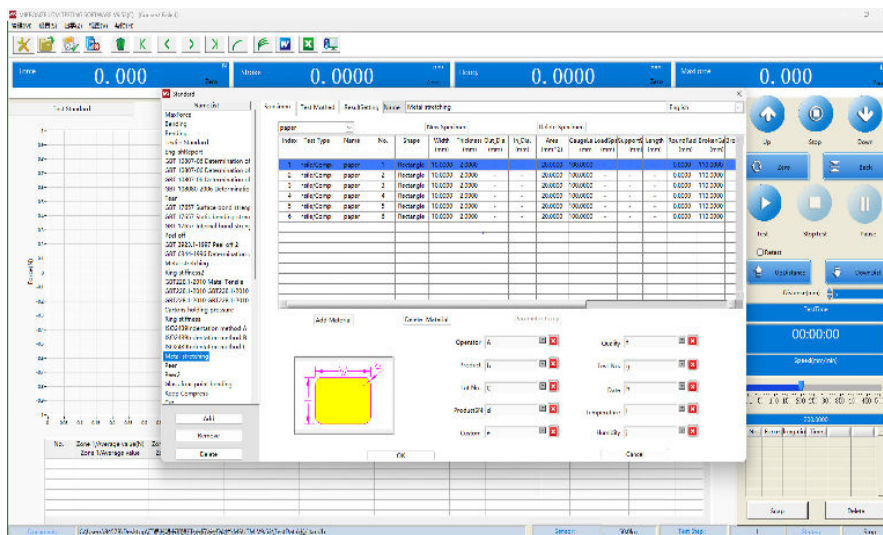

- Before starting the test, it is necessary to select an appropriate standard and set the specimen information.
- Display and set the information of test standards and test samples, including their shape and size, as well as relevant auxiliary information such as testers and specimen materials.

Mikrosize Software Interface

New Standard

The screenshot shows the Mikrosize software interface. On the left is a 'NameList' pane with various test methods. The main window displays a 'Specimen' table with columns for Index, Test Type, Name, No., Shape, Width (mm), Thickness (mm), Out. Dia. (mm), In. Dia. (mm), Area (mm²), Gauge Le. (mm), Load Sp. (mm), Support (mm), Length (mm), Round Rad. (mm), Broken Ga. (mm), and Bro. (mm). A dialog box titled 'Others' is open, prompting the user to 'Please enter standard name:'. Below the dialog, there are input fields for Operator, Product, Lot No., ProductSN, Custom, Quality, Test No., Date, Temperature, and Humidity. A diagram of a rectangular specimen is also visible.

Index	Test Type	Name	No.	Shape	Width (mm)	Thickness (mm)	Out. Dia. (mm)	In. Dia. (mm)	Area (mm ²)	Gauge Le. (mm)	Load Sp. (mm)	Support (mm)	Length (mm)	Round Rad. (mm)	Broken Ga. (mm)	Bro. (mm)
1	nsile/Compr	paper	1	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
2	nsile/Compr	paper	2	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
3	nsile/Compr	paper	3	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
4	nsile/Compr	paper	4	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
5	nsile/Compr	paper	5	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
6	nsile/Compr	paper	6	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	


The screenshot shows the Mikrosize software interface. On the left is a 'NameList' pane with various test methods. The main window displays a 'Specimen' table with columns for Index, Test Type, Name, No., Shape, Width (mm), Thickness (mm), Out. Dia. (mm), In. Dia. (mm), Area (mm²), Gauge Le. (mm), Load Sp. (mm), Support (mm), Length (mm), Round Rad. (mm), Broken Ga. (mm), and Bro. (mm). A dialog box titled 'Others' is open, prompting the user to 'Input Name' and 'Sample Num'. Below the dialog, there are input fields for Operator, Product, Lot No., ProductSN, Custom, Quality, Test No., Date, Temperature, and Humidity. A diagram of a rectangular specimen is also visible.

Index	Test Type	Name	No.	Shape	Width (mm)	Thickness (mm)	Out. Dia. (mm)	In. Dia. (mm)	Area (mm ²)	Gauge Le. (mm)	Load Sp. (mm)	Support (mm)	Length (mm)	Round Rad. (mm)	Broken Ga. (mm)	Bro. (mm)
1	nsile/Compr	paper	1	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
2	nsile/Compr	paper	2	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
3	nsile/Compr	paper	3	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
4	nsile/Compr	paper	4	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
5	nsile/Compr	paper	5	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	
6	nsile/Compr	paper	6	Rectangle	10.0000	2.0000	-	-	20.0000	100.0000	-	-	-	0.0000	110.0000	

● It is possible to add or delete test standards and specimen information.


Mikrosize Software Interface

Test Method

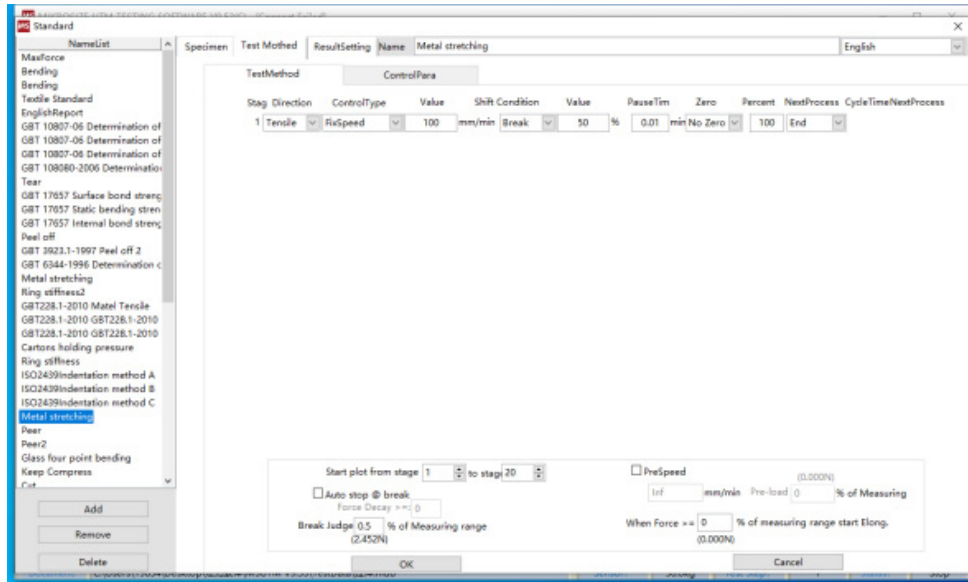

- After selecting the test standard, you can edit the test method. For example, for the tensile standard test method: set the test speed; choose the control mode such as constant deformation, constant speed, or constant stress.
- Also, set the stop conditions, like break point, yield point, or when parameters such as deformation, force, or strain reach the set values.


Parameter Control

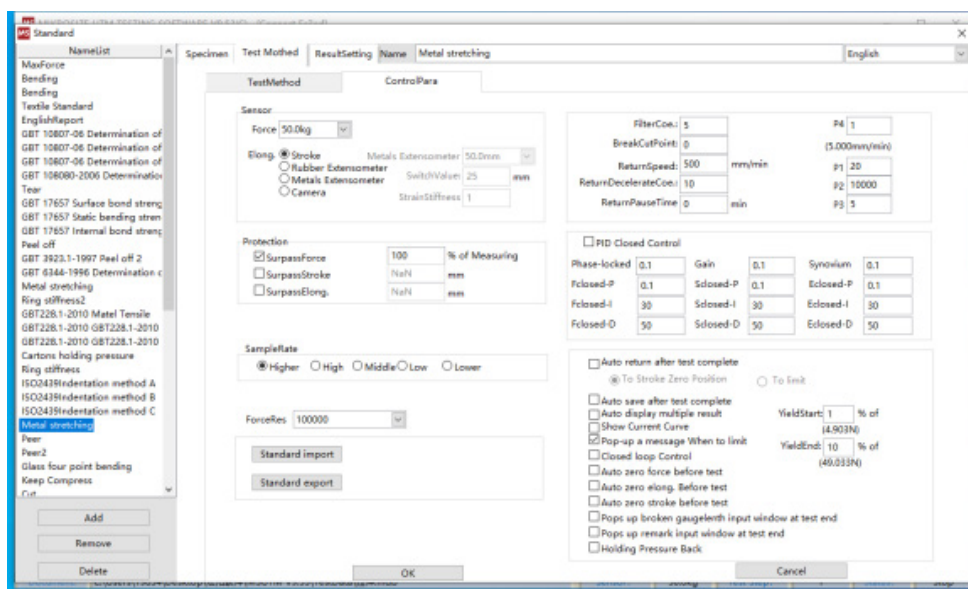

- Set parameters related to sensors, extension meters, force value resolution, and system control.


Mikrosize Software Interface

Select Output Items

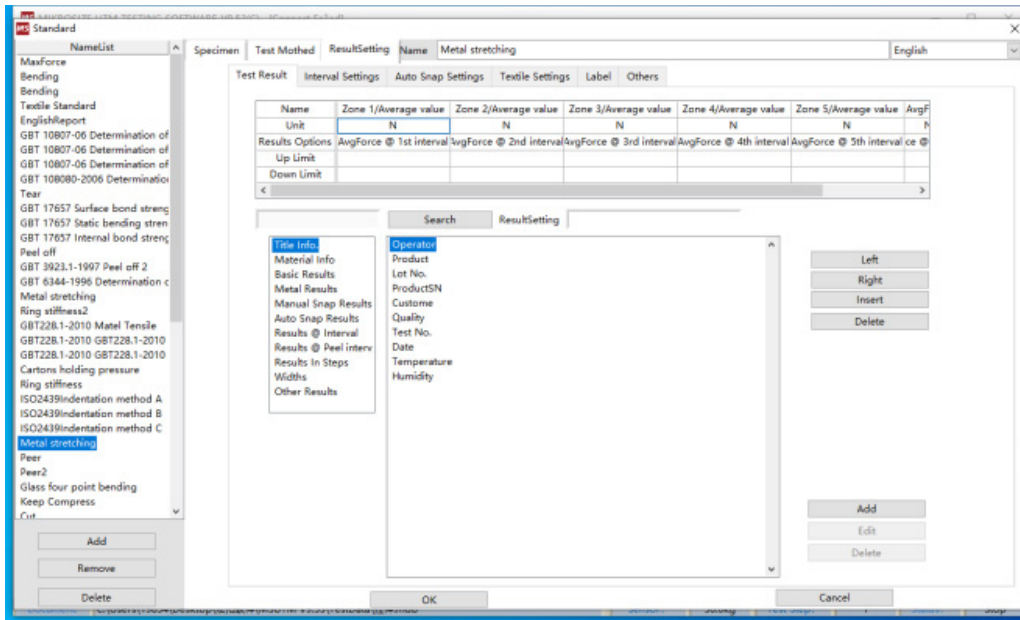

- The software classifies all test results into 11 categories for easy retrieval by customers.
- Users can also customize relevant test results.
- The added items will be displayed in the test report, allowing users to focus on the specific data they need.


Interval Settings

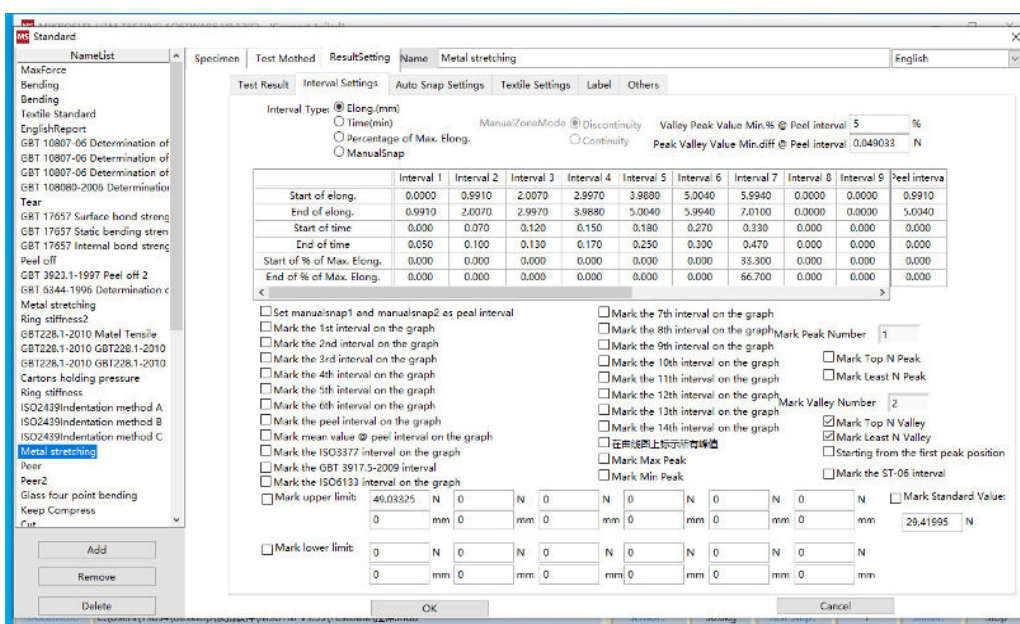

- It supports three modes of dividing intervals: deformation, time, and deformation percentage.


Mikrosize Software Interface

Auto - Point Selection

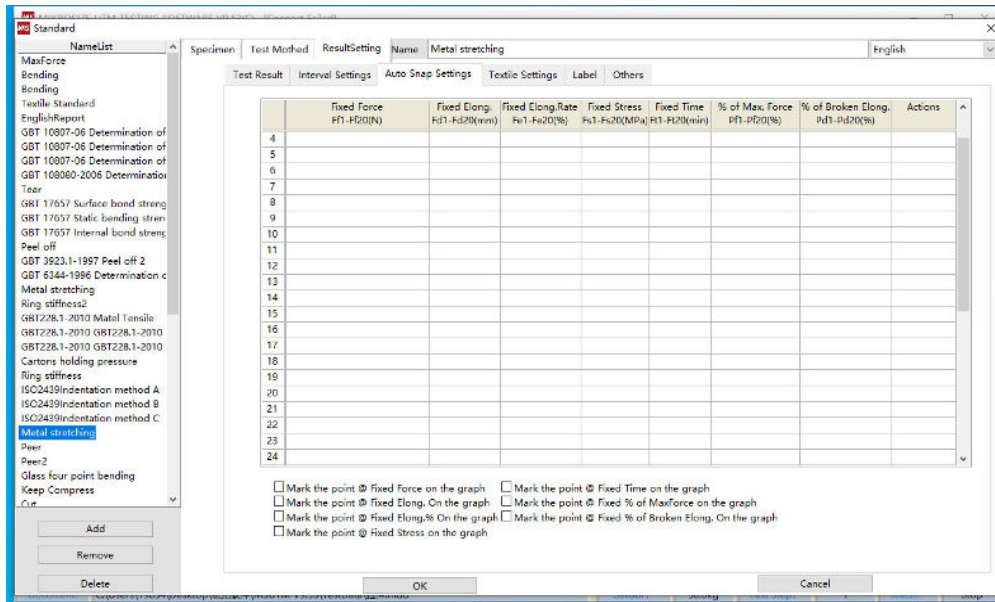

- Supports 7 point - selection modes: fixed - force point selection, fixed - deformation point selection, fixed - elongation - rate point selection, fixed - stress point selection, fixed - time point selection, percentage - of - maximum - force point selection, and percentage - of - fracture - deformation


Marking

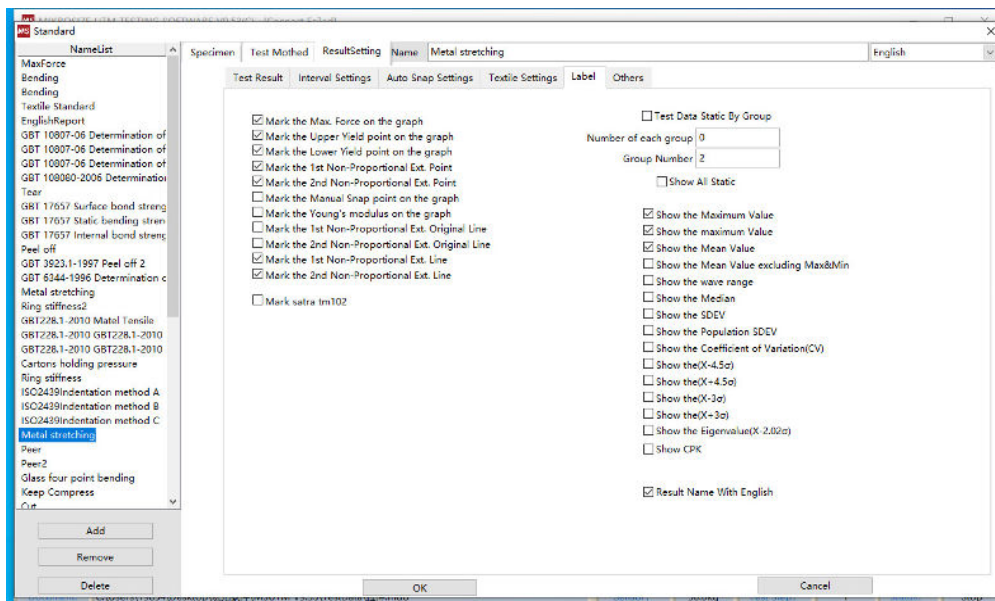

- Used to set the marking of various characteristic points on the curve, as well as whether to display statistical values such as the maximum value and the average value in the test results.


Mikrosize Software Interface

Others

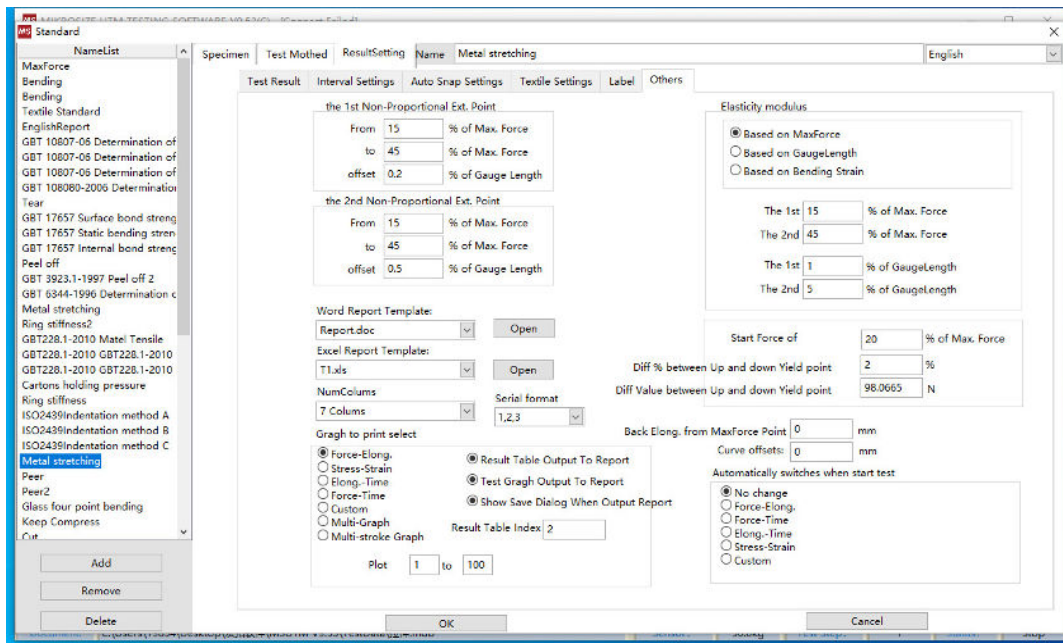

- Also, make report - related settings, such as the Word and Excel report templates, the selection of graphs to be printed in the report, and whether to output the test result table and graphs in the report.


Language Selection

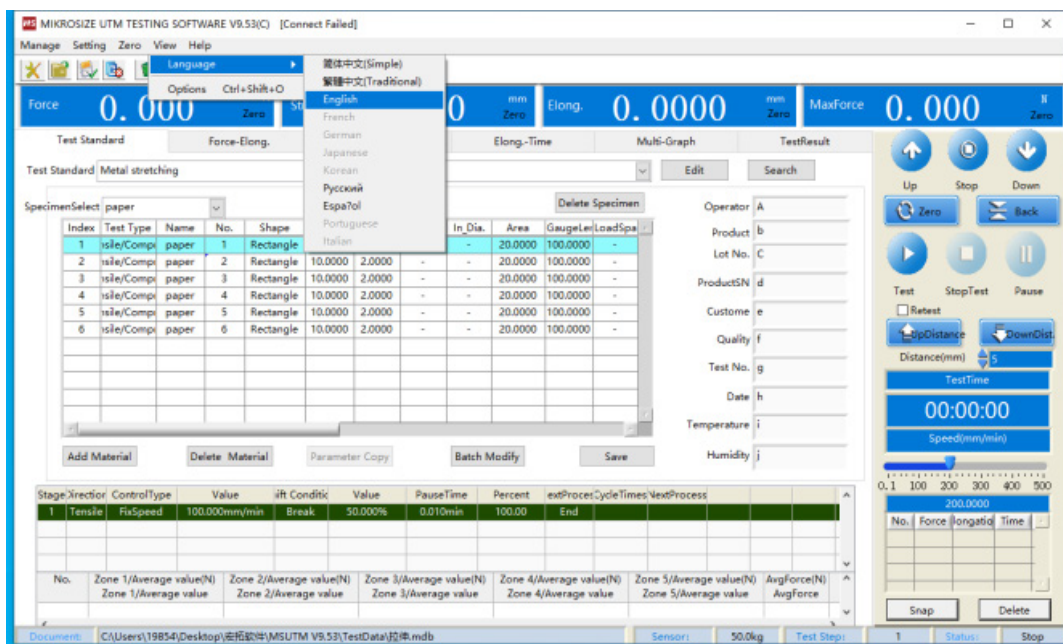

- Supports multiple languages
Can be customized according to customer requirements.

Mikrosize Software Interface


Report Output

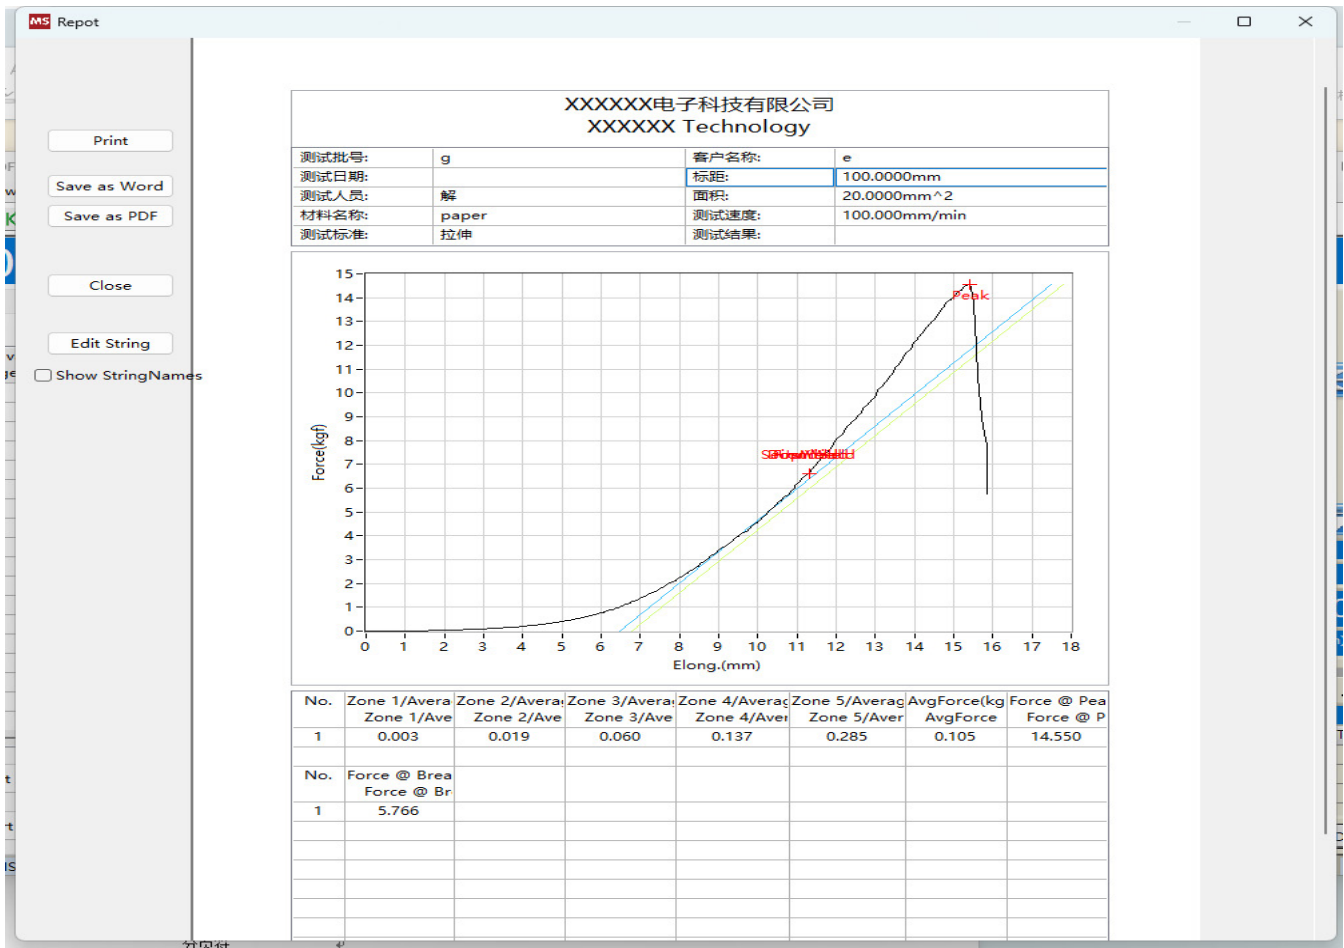


- The software comes with a simple result report, and users can edit the report.
- The output formats are PDF and Word. Users can also choose to output the report through the shortcuts on the top of the software, with options of Word and Excel.

Mikrosize Software Interface

Test Results

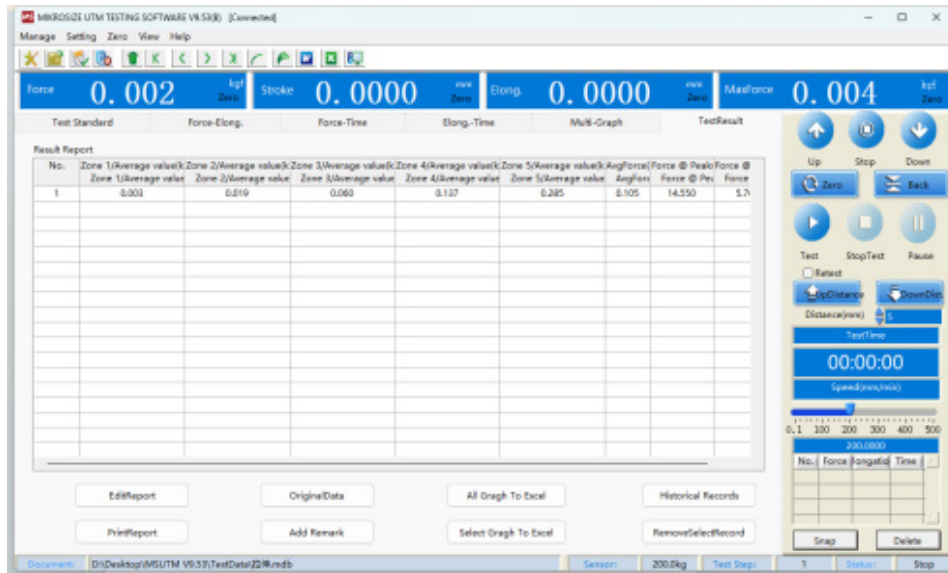


Historical Data

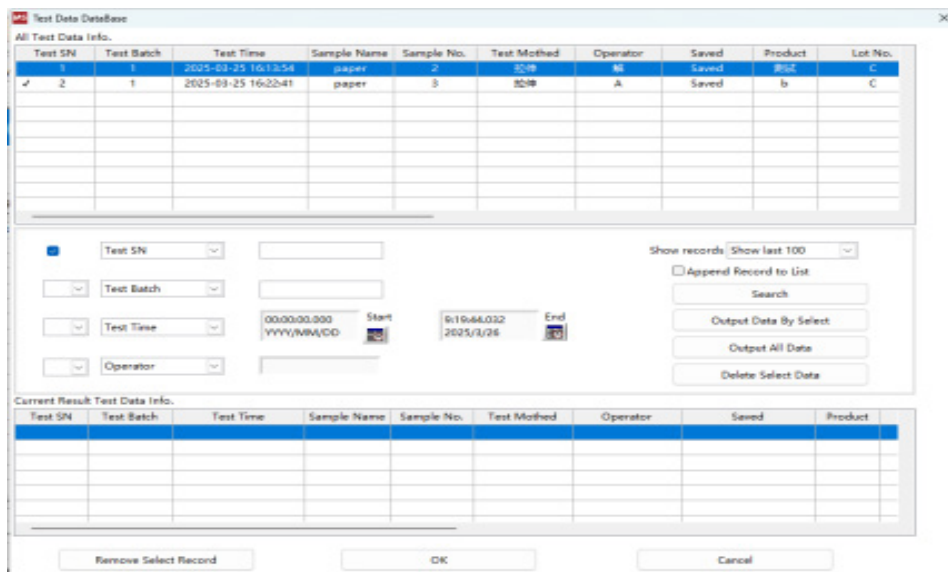

- After the test is completed, view the test data and results on this interface.
- "All Test Data Info" displays all the test data - related information saved in the file, facilitating customers to query and retrieve the data in the file.
- Users can also query the corresponding test data according to the test time, number of times, batch, material, standard, etc., and output the test result report based on the query results.
- "Current Result Test Data Info" shows the test information corresponding to the current output result.

Mikrosize Software Interface

Units

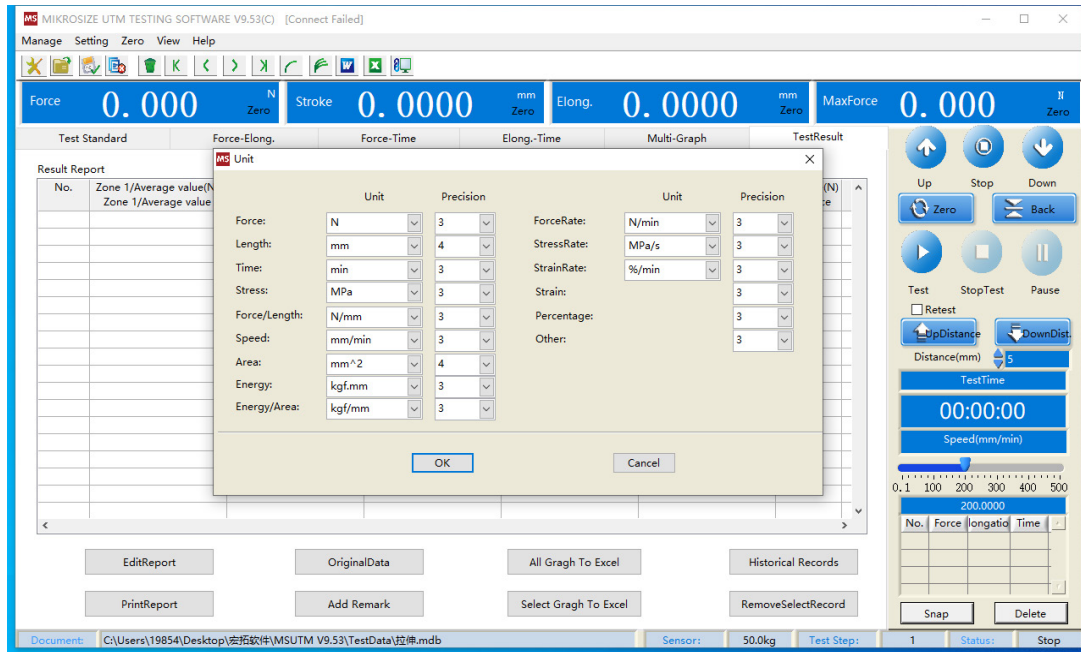


- There are multiple different units available for each parameter.
- Precision represents the number of decimal places.
- The parameter units determine the unit system of the entire system, and all parameter operations are performed based on this unit system.

Force	gf, kgf, N, kN, tf(SI), lbf, tf(long), tf(short), ozf, cN, mN
Length	mm, cm, m, in, km, μm
Time	s, min, h
Stress	Pa, kPa, MPa, GPa, kN/m^2 , N/m^2 , N/cm^2 , N/mm^2 , kgf/m^2 , kgf/cm^2 , kgf/mm^2 , gf/cm^2 , gf/mm^2 , psi, kpsi, lbf/in^2 , lbf/ft^2 , gf/in^2 , gf/m^2
Force/Length	N/mm , N/cm , N/m , kgf/mm , kgf/cm , kgf/m , gf/mm , gf/cm , kN/m , lbf/in , gf/in , kgf/in , pli, kN/mm , N/in
Speed	mm/min , mm/s , cm/min , cm/s , in/min , in/s
Area	mm^2 , cm^2 , m^2 , in^2 , ft^2
Energy	kgf.mm , kgf.cm , kgf.m , N.mm , N.cm , N.m , lbf.in , J, kJ, cal, kcal, gf.mm , gf.cm , gf.m
Energy/Area	gf/mm , gf/cm , kN/m , lbf/in , gf/in , kgf/in , pli

Mikrosize Software Interface

Multi - Graph

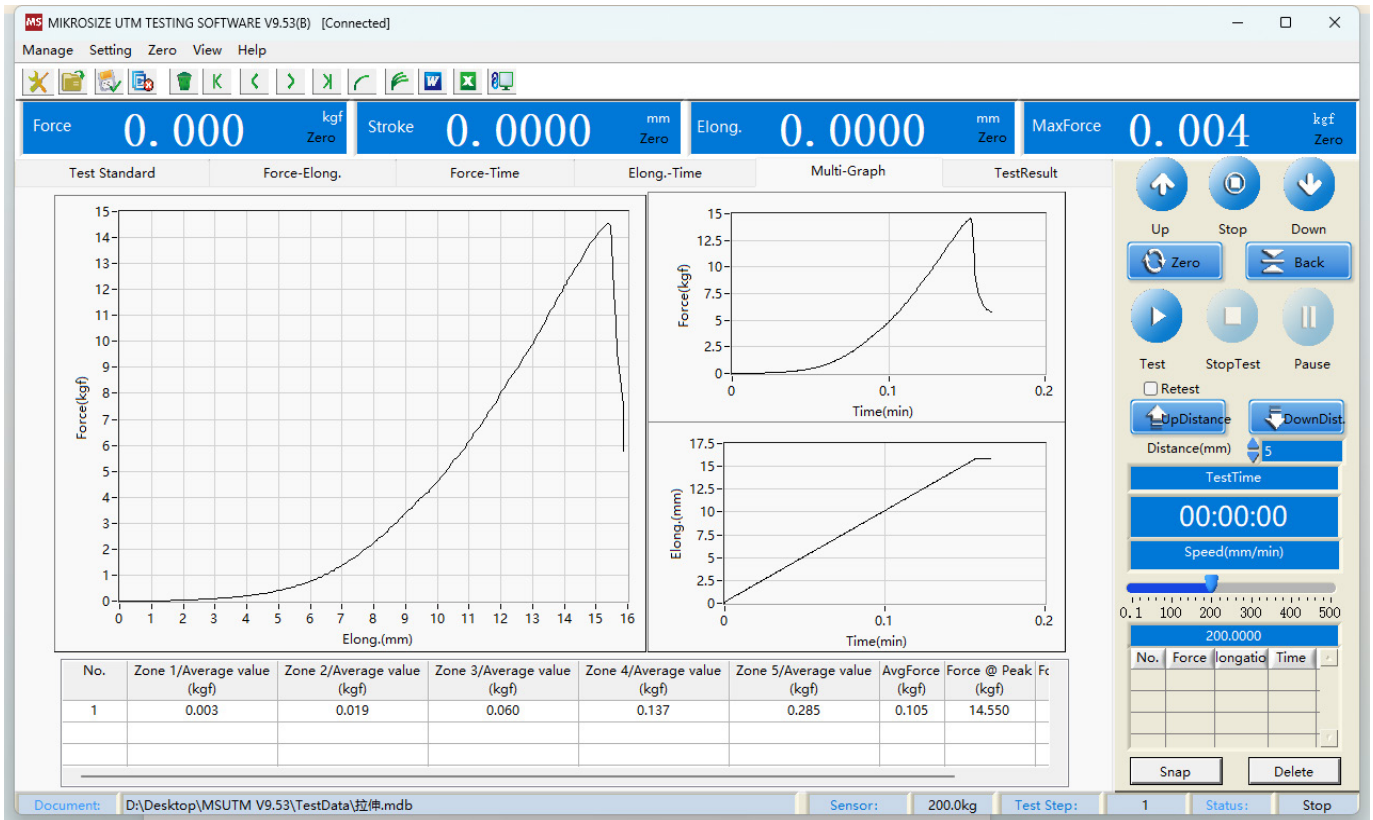

- Supports the multi - graph mode, allowing users to view three different - axis curves of the same test simultaneously. This is convenient and intuitive, avoiding the need to switch back and forth.






Technical Specification

Model		UTM-TSH								
Subdivision Model		UTM-TSH-5	UTM-TSH-10	UTM-TSH-20	UTM-TSH-50	UTM-TSH-100	UTM-TSH-200	UTM-TSH-200	UTM-TSH-500	UTM-TSC-1000
Capacity	KN	0.05	0.1	0.2	0.5	1	2	5	10	20
	KG	5	10	20	50	100	200	500	1000	2000
	lb	11	22	44	110	220	440	1102	2204	4408
Testing Machine Class		Class 1								
Force Unit		g、Kg、lb、N、KN								
Displacement Unit		Inch、cm、mm								
Effective Test Force		0.4%~100%FS								
Force Accuracy		Within $\pm 1\%$ of Indication Value								
Force Resolution		1/300000								
Displacement Accuracy		Within $\pm 1\%$ of Indication Value								
Displacement Resolution		0.001mm								
Deformation Measurement Range		2%~100%FS								

Technical Specification

Deformation Indication Accuracy	Within $\pm 1\%$ of the indicated value
Maximum Test Speed	500mm/min (Optional 1000mm/min)
Minimum Test Speed	0.1mm/min
Speed Accuracy	Within $\pm 1\%$ of the indicated value
Crossbeam Stroke	No - fixture test stroke:1320mm Test stroke with fixture: 800mm
Fixture Configuration	Configured according to customer requirements
Return Method	Manual, Automatic
Stop Method	1.Automatically stop at the maximum fracture value 2.Stop when the upper and lower limit safety settings are
Safety Device	1.Mechanical travel switch protection 2.Emergency stop switch for emergency braking
Overload Protection	When reaching 100% of the maximum load, the machine automatically stops for protection
Power Supply Voltage	220V.AC/50Hz (Can be selected as 110V.AC/60Hz according to the country)
Machine Size/Weight	L*W*H:450mm*350mm*1570mm About 80kg
Packaging Size/Weight	L*W*H:500mm*400mm*1600mm About 100KG

Standard Delivery

Name	Qty	Photo
Machine Mainframe	1pc	
Tensile Fixture	1pc	
Power Cord	1pc	/
Horizontal Adjusting Feet	4pcs	/
Instruction Manual	1copy	
Warranty Card	1copy	
Product Certificate	1copy	

Optional Delivery

Optional

Small deformation metal extensometer

Large deformation extensometer

Testing software

Other types or customized fixtures

Computer

Mikrosize Precision Instrument Co.,Ltd

Add: A-4035 RuiFeng Business Expo , Wuhu City, China , 241000.

Tel: 0553-2836939 Fax:0553-2836938 Web: www.mikrosize.com

